



Appendix D BaseLine™ Self Retracting Lifelines

USER INSTRUCTIONS

Model	Length	Minimum Arrest Distance	Arrest Force	ANSI Standard	Lifeline	Rated Capacity
R530007	7 ft	36"	900 lbs. Avg	Z359.14-2014 Class B	1" Dyneema Webbing	310 lbs
R530007-R	7 ft	36"	900 lbs. Avg	Z359.14-2014 Class B	1" Dyneema Webbing	310 lbs
R5300011	11 ft	36"	900 lbs. Avg	Z359.14-2014 Class B	1" Dyneema Webbing	310 lbs
R5300011-R	11 ft	36"	900 lbs. Avg	Z359.14-2014 Class B	1" Dyneema Webbing	310 lbs

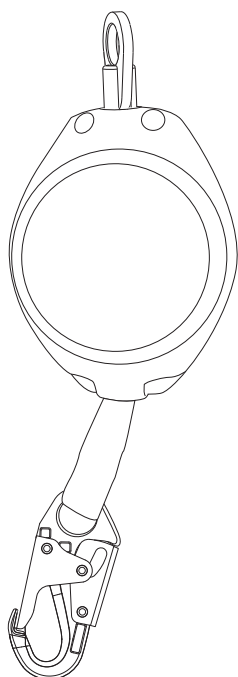

Single Leg

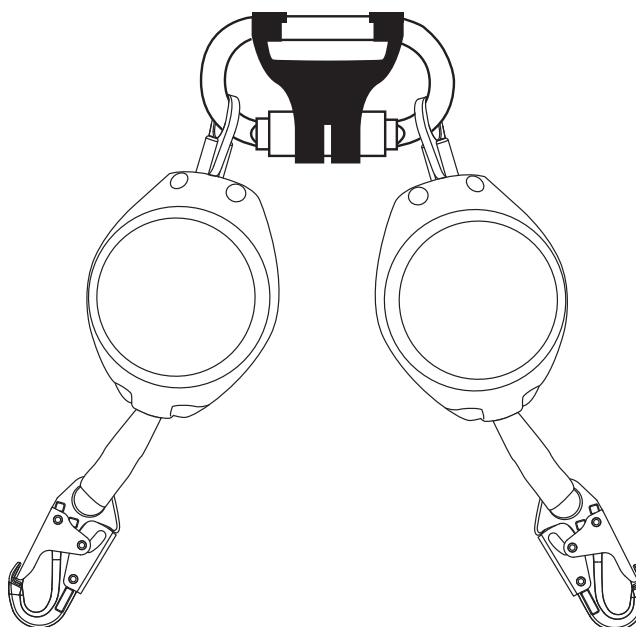

Dual Leg

NOTE: Werner Fall Protection BaseLine™ Self-Retracting Lifeline models must NOT be used in Leading Edge applications. ALWAYS keep lifeline from contacting sharp or abrasive edges and surfaces.

WARNING:


ALL components of the personal fall arrest system must be selected and determined to be suitably compatible with Werner BaseLine™ SRL by a Competent Person.

ENGLISH




DUAL-LEG CONFIGURATIONS:


1. When using dual leg SRL configuration, make sure to maintain 100% tie-off at all times. ALWAYS maintain one engaged snap hook or rebar hook attached to an appropriate anchorage connector, while hooking disengaged snap hook or rebar hook.

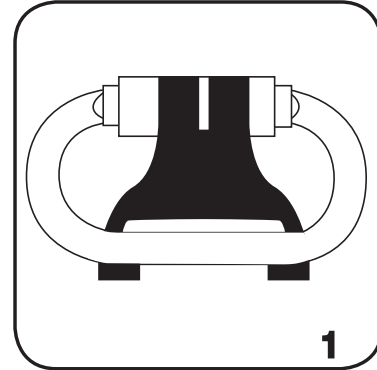


2. Unclip plastic keeper and slip it off gate. See figures 1 and 2.

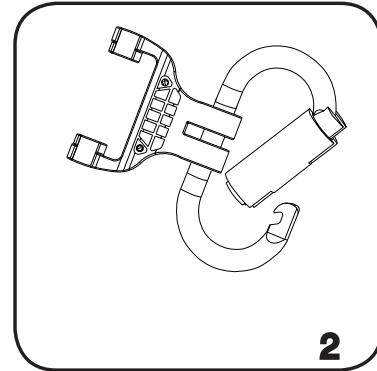

3. Open gate and connect first SRL unit. Move connection point around connector. See figure 3.

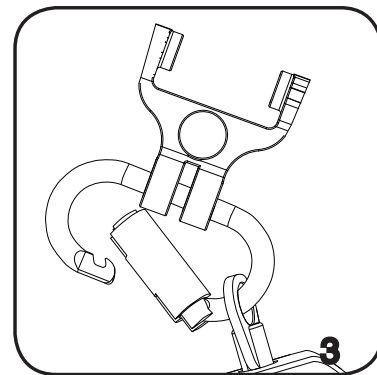


4. Hook connector around both webbing straps on the back plate: follow the path of the back D-ring. See figure 4.

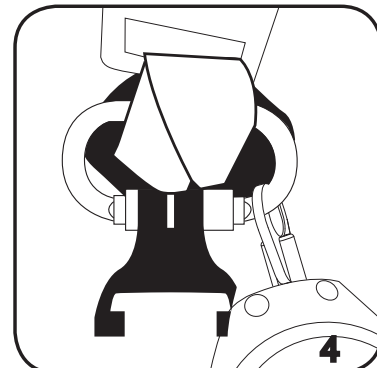


Appendix D BaseLine™ Self Retracting Lifelines

USER INSTRUCTIONS

5. With first SRL unit and webbing in place, connect second SRL unit. See figure 5.

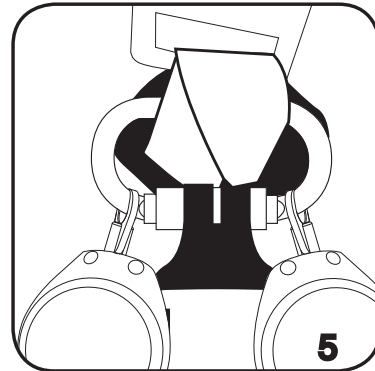


6. Reposition the plastic keeper, locating SRL units and webbing in each respective slot. See figure 6.

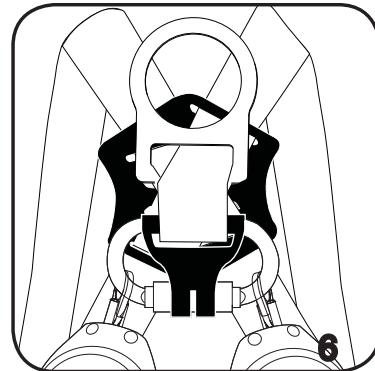

7. **ONLY** use with Werner Fall Protection Self Retracting Lifelines designed to be back mounted.

HORIZONTAL SYSTEMS:

Applications where the SRL is used horizontally or with a horizontal system, the SRL and horizontal system components must be compatible. Both the horizontal and vertical distances are required for clearance calculations. Horizontal systems must be designed and installed under the supervision of a qualified person.

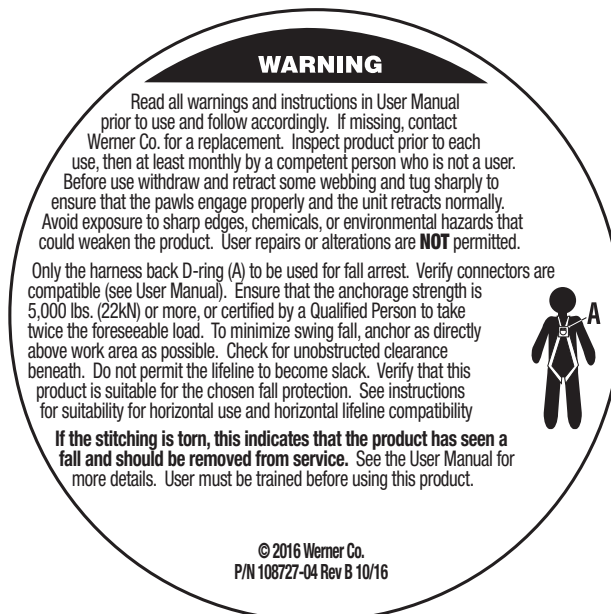

ENGLISH



WERNER
BASELINE™
SELF RETRACTING LIFELINE

Model: **R530007 Mk 1**
Lifeline Length: **7 feet**
Material-Diameter/Width & Thickness:
Dyneema Webbing 1" Wide x .07" Thick
Average Arrest Force: **900 lbs.**
Arrest Distance: **36"**
Maximum User Weight: **310 lbs.**

Standard Code
Z359.14-2014 Class B
OSHA 1910 & 1926

Inspection Log				
Year 1	Year 2	Year 3	Year 4	Year 5

P/N108726-01
Rev A 1/16

WERNER
BASELINE™
SELF RETRACTING LIFELINE

Model: **R530007-R Mk 1**
Lifeline Length: **7 feet**
Material-Diameter/Width & Thickness:
Dyneema Webbing 1" Wide x .07" Thick
Average Arrest Force: **900 lbs.**
Arrest Distance: **36"**
Maximum User Weight: **310 lbs.**

Standard Code
Z359.14-2014 Class B
OSHA 1910 & 1926

Inspection Log				
Year 1	Year 2	Year 3	Year 4	Year 5

P/N108726-02
Rev A 1/16

WERNER
BASELINE™
SELF RETRACTING LIFELINE

Model: **R530011-R Mk 1**
Lifeline Length: **11 feet**
Material-Diameter/Width & Thickness:
Dyneema Webbing 1" Wide x .07" Thick
Average Arrest Force: **900 lbs.**
Arrest Distance: **36"**
Maximum User Weight: **310 lbs.**

Standard Code
Z359.14-2014 Class B
OSHA 1910 & 1926

Inspection Log				
Year 1	Year 2	Year 3	Year 4	Year 5

P/N108726-04
Rev A 1/16

WERNER
BASELINE™
SELF RETRACTING LIFELINE

Model: **R530011 Mk 1**
Lifeline Length: **11 feet**
Material-Diameter/Width & Thickness:
Dyneema Webbing 1" Wide x .07" Thick
Average Arrest Force: **900 lbs.**
Arrest Distance: **36"**
Maximum User Weight: **310 lbs.**

Standard Code
Z359.14-2014 Class B
OSHA 1910 & 1926


Inspection Log				
Year 1	Year 2	Year 3	Year 4	Year 5

P/N108726-03
Rev A 1/16


Anexo D - Cuerdas Salvavidas Auto-Re retráctiles BaseLine™

INSTRUCCIONES PARA EL USUARIO

Modelo	Longitud	Distancia de detención mínima	Fuerza de detención	Norma ANSI cumplida	Cuerda salvavidas	Capacidad nominal
R530007	7 pies (2.15 m)	36" (91.4cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase B	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)
R530007-R	7 pies (2.15 m)	36" (91.4cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase B	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)
R5300011	11 pies (3.38 m)	36" (91.4cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase B	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)
R5300011-R	11 pies (3.38 m)	36" (91.4cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase B	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)

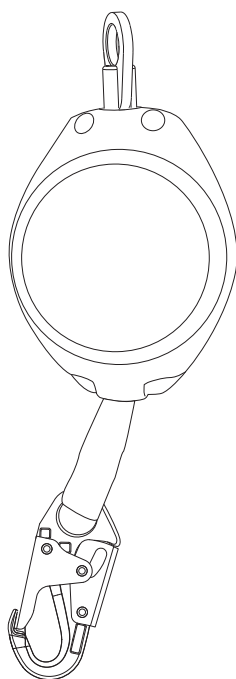

Pata única

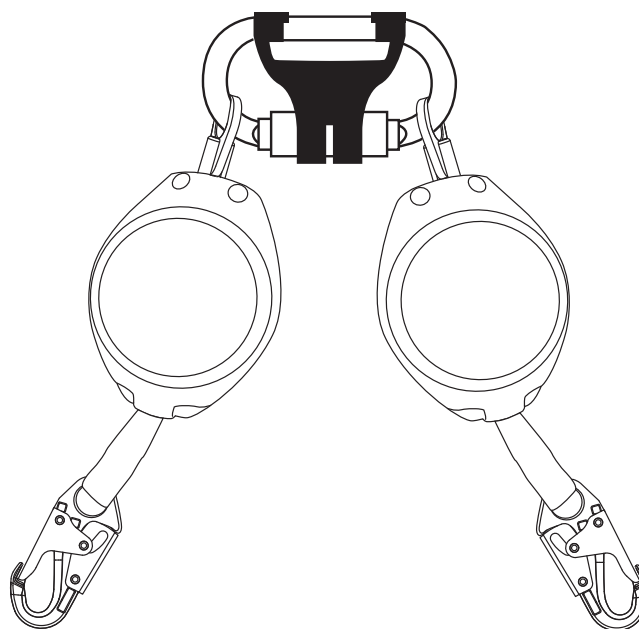

Pata doble

NOTA: Los modelos de cuerdas salvavidas auto-re retráctiles BaseLine™ de protección contra caídas de Werner NO se deben utilizar en aplicaciones de borde delantero. SIEMPRE evite que la cuerda salvavidas haga contacto con bordes y superficies filosos o abrasivos.


ADVERTENCIA:

TODOS los componentes del sistema personal de detención de caídas deben ser seleccionados y determinados como compatibles con la cuerda salvavidas auto-re retráctil BaseLine™ de Werner por parte de una persona competente.


ESPAÑOL

CONFIGURACIONES DE PATA DOBLE:


1. Al utilizar la configuración de cuerda salvavidas auto-retráctil de pata doble, asegúrese de mantener el 100% de amarre en todo momento. SIEMPRE mantenga un gancho de cierre resortado o un gancho para barra de refuerzo conectado a un conector de ancladero apropiado, mientras engancha el otro gancho de cierre resortado o gancho para barra de refuerzo.

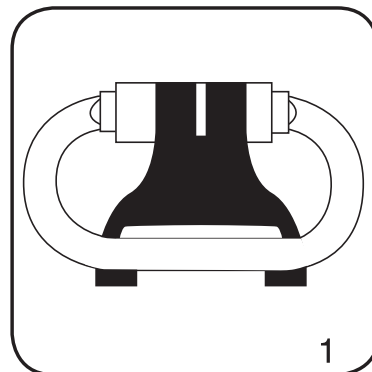


2. Libere la abrazadera plástica y deslícela fuera de la puerta. Vea las figuras 1 y 2.

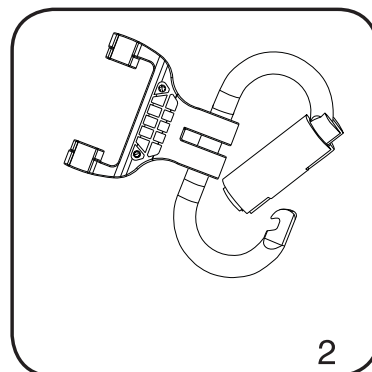

3. Abra la puerta y conecte la primera unidad de cuerda salvavidas auto-retráctil. Mueva el punto de conexión alrededor del conector. Vea la figura 3.

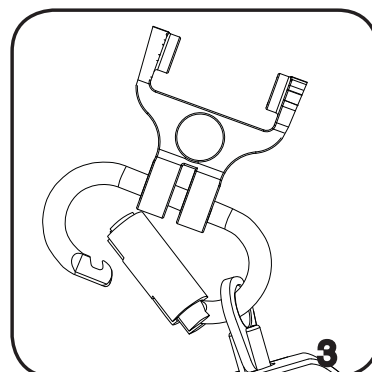


4. Enganche el conector alrededor de ambas correas tejidas en la placa de espalda: siga la trayectoria del anillo en "D" de espalda. Vea la figura 4.

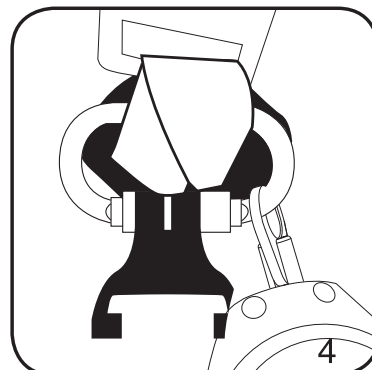


Anexo D - Cuerdas Salvavidas Auto-Retráctiles BaseLine™

INSTRUCCIONES PARA EL USUARIO

5. Con la primera unidad de cuerda salvavidas auto-retráctil y correas tejidas en su sitio, conecte la segunda unidad de cuerda salvavidas auto-retráctil. Vea la figura 5.

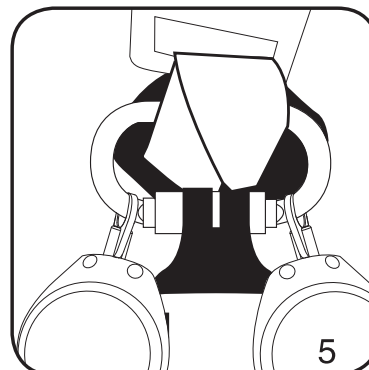

6. Posicione nuevamente la abrazadera plástica, colocando las unidades de cuerdas salvavidas auto-retráctiles y correas tejidas en cada ranura respectiva. Vea la figura 6.

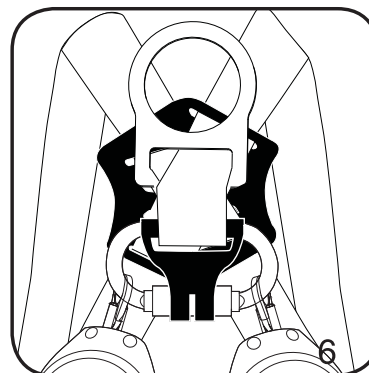

7. SOLO utilice cuerdas salvavidas auto-retractiles de marca Werner, diseñados para ser montado en la espalda.

Sistemas horizontales

Aplicaciones donde se utiliza el SRL horizontalmente o con un sistema horizontal, el SRL y los componentes del sistema horizontal deben ser compatibles. Las distancias horizontal y vertical, ambas son requeridas para los cálculos de espacio libre. Sistemas horizontales deben ser diseñados e instalados bajo la supervisión de una persona cualificada.

